

Thank You for your support and congratulations
on becoming a member of the Colony!
By following these simple steps,
your Bee-Nail will last a Lifetime.

For more information on setting up and
maintaining your unit please visit:
www.bee-nails.com
or call:
1-844-BEE-NAIL


DON'T FORGET TO REGISTER YOUR UNIT FOR WARRANTY ONLINE AT:
<http://www.bee-nails.com/Support/Register-Your-Product.aspx>

*Some exclusions apply see website for more info.



SET UP GUIDE

PLEASE READ BEFORE SETTING UP YOUR UNIT

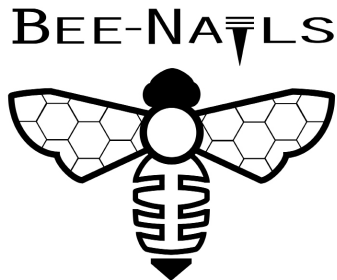

CAUTION: THESE UNITS ARE HOT!

Instructions on setting up your Bee-Nail for the first time:

1. TITANIUM NAIL & TRINITY NAIL:

(if assistance is needed to set up Ceramic or E-Banger please call 844-BEE-NAIL)

-Unscrew all 3 pieces of your nail. (As seen in figure 1).

-A: Nail: Slide nail onto heating coil and screw A & B together.

-B: Heat Sink: This connects A to C and prevents your adapter (C) from getting hot and cracking your glass.

-C: Adapter: Designed to fit 10mm, 14mm, and 18mm male or female rigs. Screw B and C together.

2. PLUG IN CABLES:

-Carefully and securely plug provided cables into control unit.

WARNING:

When plugging in your XLR cable, do not press the "Push" button. The cable will click into place when it is secure. When disassembling the XLR cable, gently press the "Push" button and pull.

DO NOT TURN ON YOUR UNIT UNTIL FULLY ASSEMBLED!

3. POWER ON & SET TEMPERATURE:

-Turn on unit. It takes about 2minutes to heat up.

-Your unit is automatically programmed to reach an ideal temperature of 710 degrees. You can increase or decrease temperature with the up and down arrows located on the digital display. If you need to reset your temperature:

Press and hold the ">" button for 5 seconds until the "out" light begins to flash quickly. Wait 3-5 Minutes until the "out" light begins flashing normally.

The temperature controller is now reset.


4. SEASONING TITANIUM NAIL:

-Set unit to your desired temperature. Bee-Nails recommends 670-780F.

-Apply concentrate or reclaim into the bowl of the nail until it vaporizes.

-Repeat this step multiple times until your desired taste is met.

Figure 1:

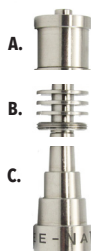

PLEASE NOTE:

These units will last thousands of hours with proper use. 700-1200F is optimal heater temperature. A few things will dramatically reduce the life of your unit and void your warranty:

DO NOT:

- Set heater temperature above 1200F/600C
- Apply water to unit or heater for cooling or cleaning
- Bend, twist, or otherwise stress the cord
- Bathe with your electronics
- Use another companies coils or cords with your Bee-Nail